

Quick Start


902460
2010-02-17

TopDown

Serie
TD 600-700

Tillverkningsnr. 101-



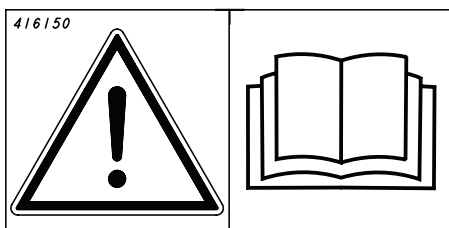


Denna Quickstart ersätter inte instruktionsboken!
Denne Quickstart erstatter ikke instruktionsbogen!
Denne Quickstart erstatter ikke instruksjonsboken!
Tämä Quickstart-pikaopas ei korvaa käyttöohjekirjaa!
This Quickstart guide does not replace the instruction manual!
Diese Quickstart-Anleitung ist kein Ersatz für das Handbuch!
Ce guide Quickstart ne remplace pas le manuel d'instructions!
Instrukcja szybkiego uruchomienia nie zastępuje instrukcji obsługi,
którą należy przeczytać przed rozpoczęciem użytkowania maszyny.
Šis ātrais mācību materiāls neaizvieto lietošanas instrukciju!
Šis „Quickstart“ vadovas nepakeičia instrukcijas!

See kiirjuhend Quickstart ei asenda kasutusjuhendit!
Návod Quickstart nenahrazuje návod k použití!
Ez a Quickstart útmutató nem helyettesíti a Használati útmutatót!
La presente guida Quickstart non sostituisce il manuale di istruzioni!
Это руководство «Quickstart» не заменяет основное
руководство по эксплуатации!
Ta vodnik Quickstart ne nadomešča priložnika z navodili!
Този бърз справочник не заменя наръчника!
Ο παρών οδηγός Γρήγορης εκκίνησης δεν αντικαθιστά το εγχειρίδιο οδηγιών!



INFO




10-15 sec

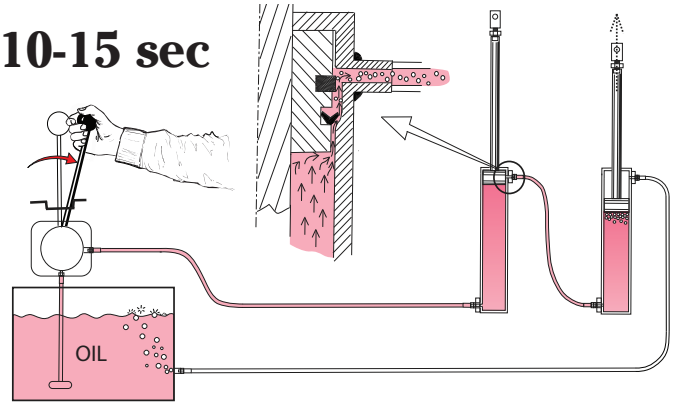


10-15 sec

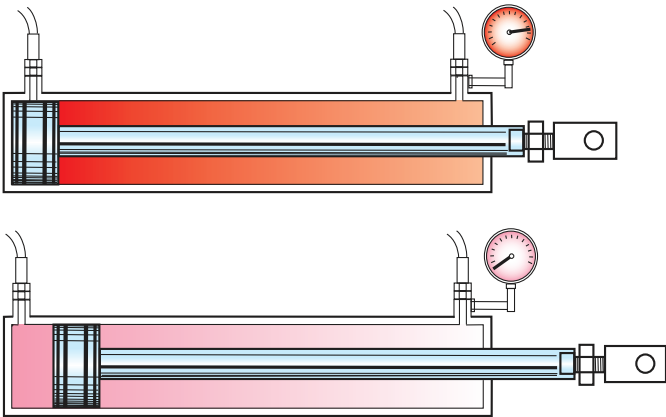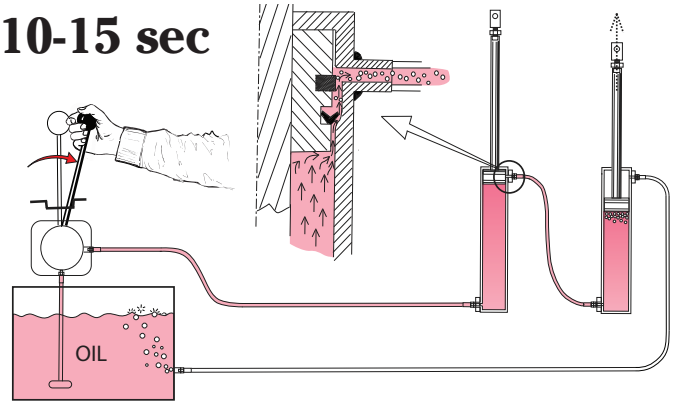


1

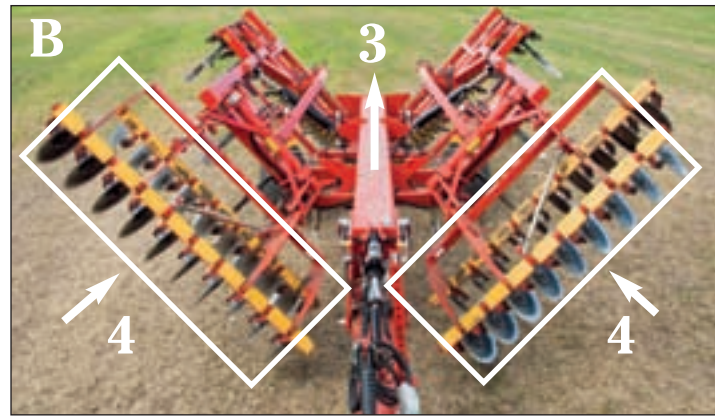

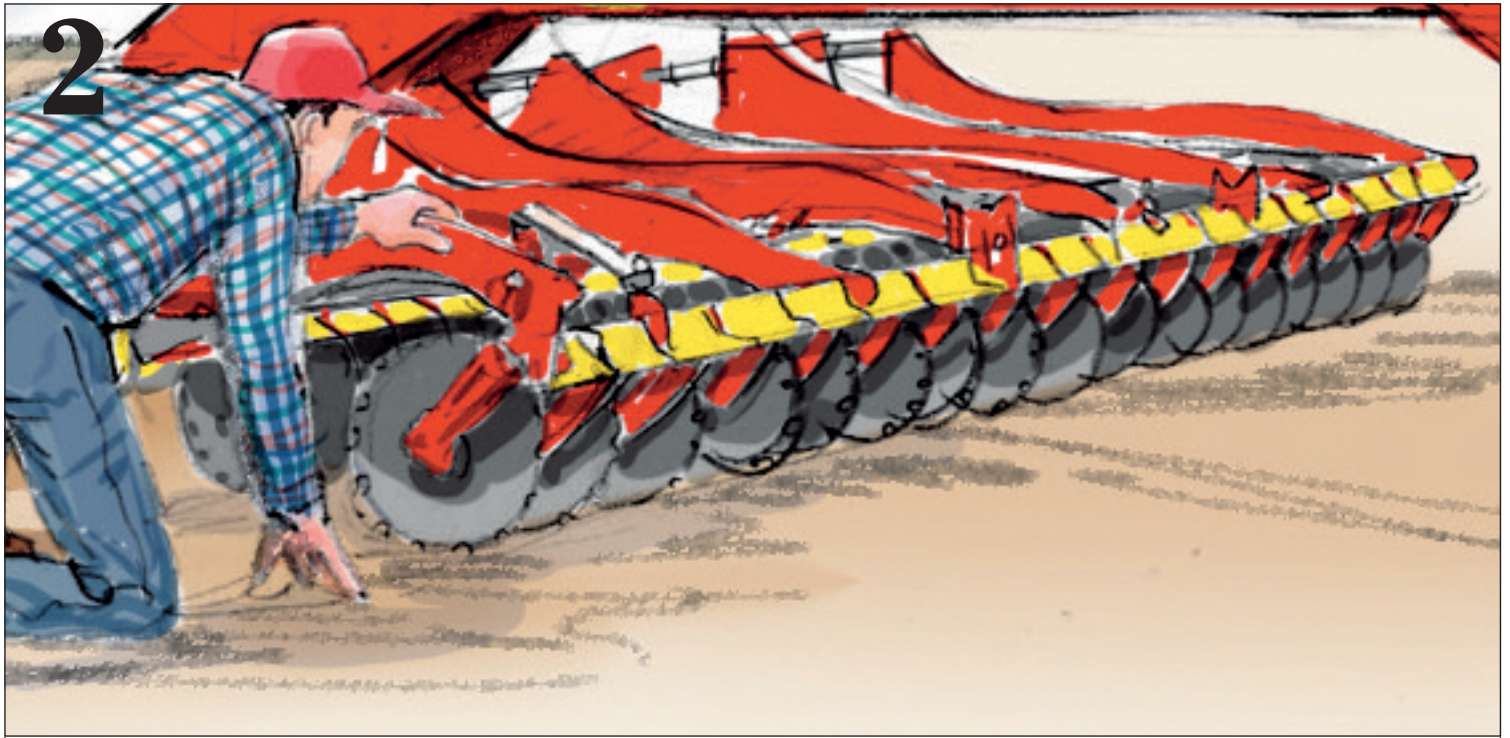

3

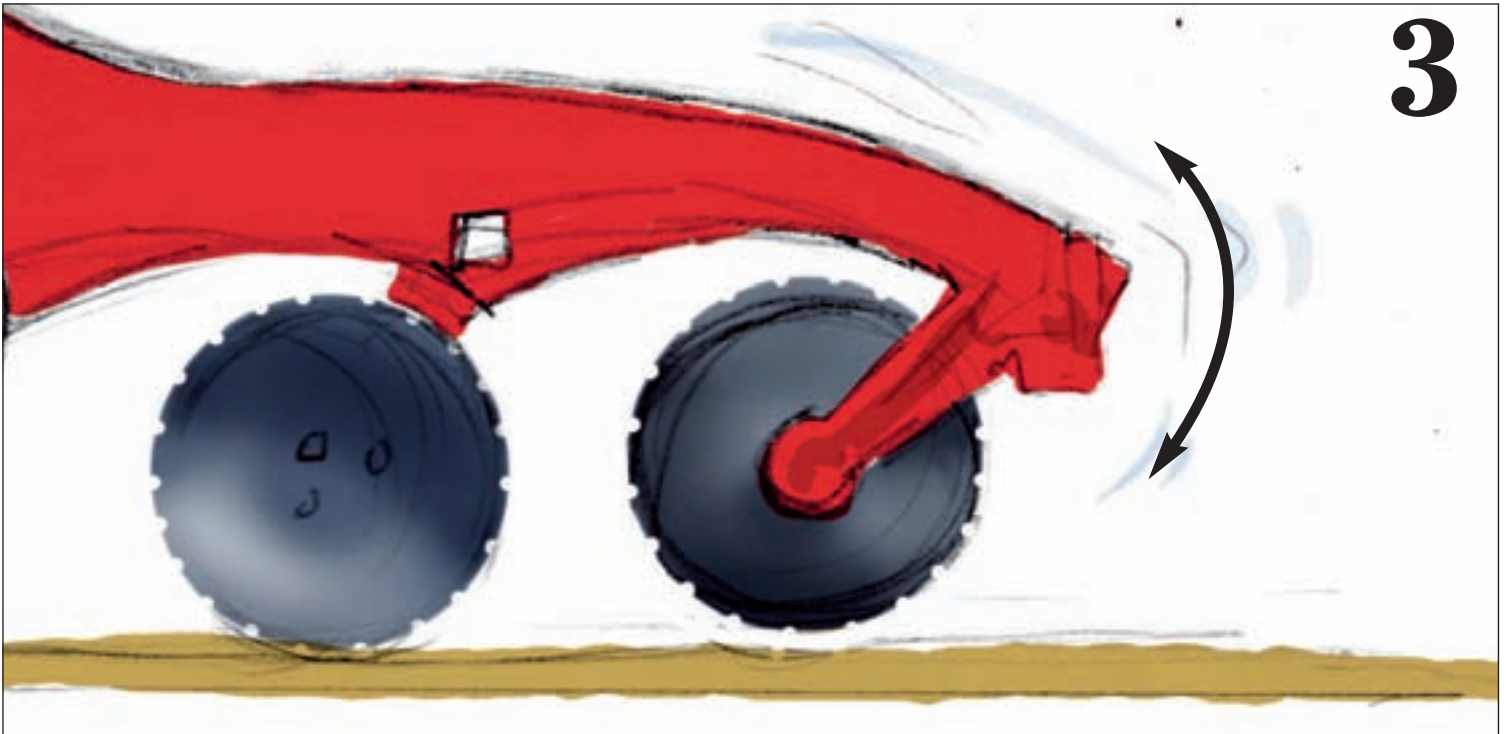

I



II



III

4



I



II



III





X
NO!



I



II



✓
OK!

III


6



I




II

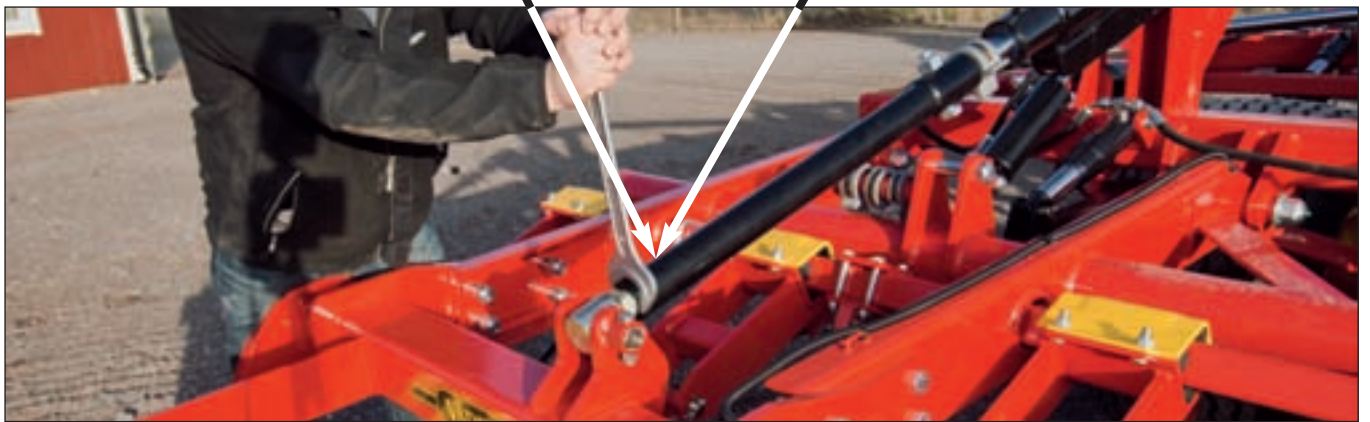


III



7

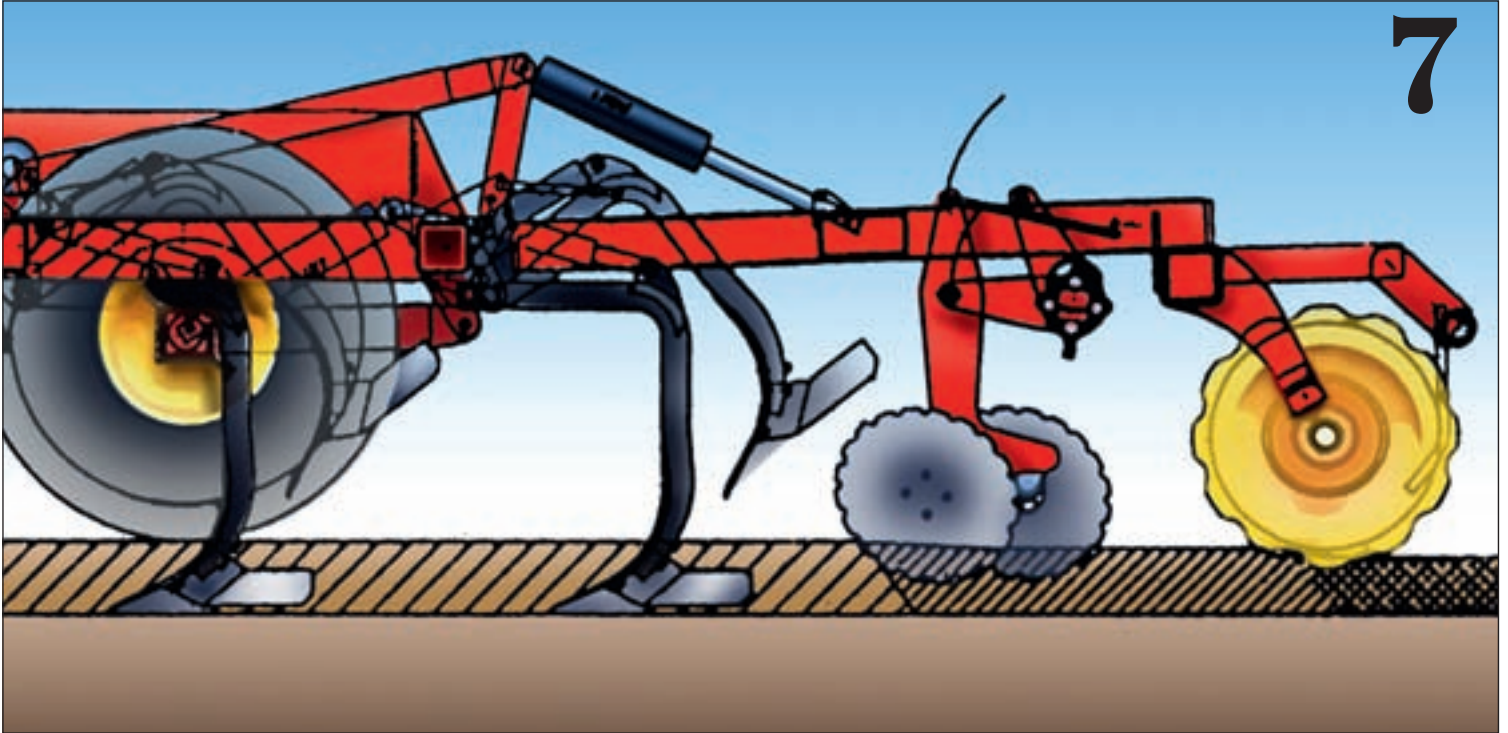

I

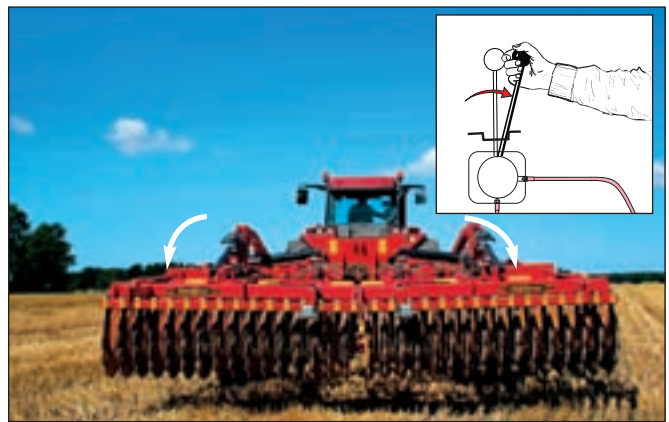

II




III

8



I


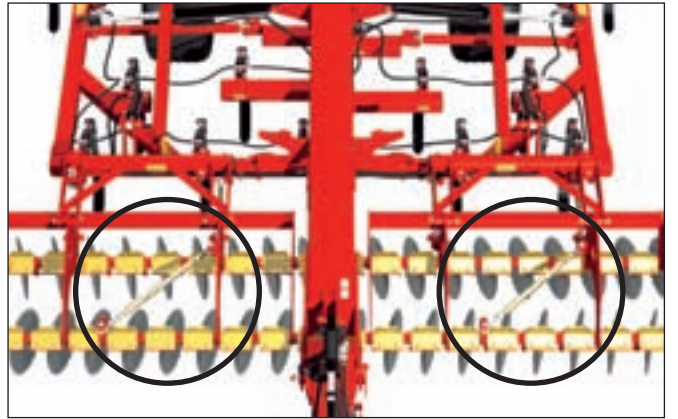


II



III



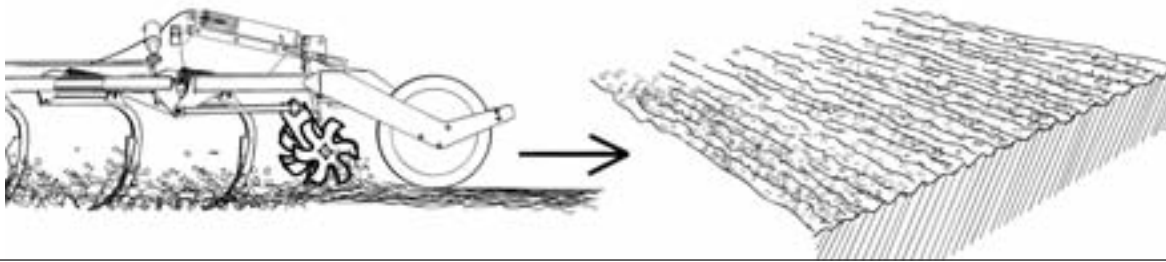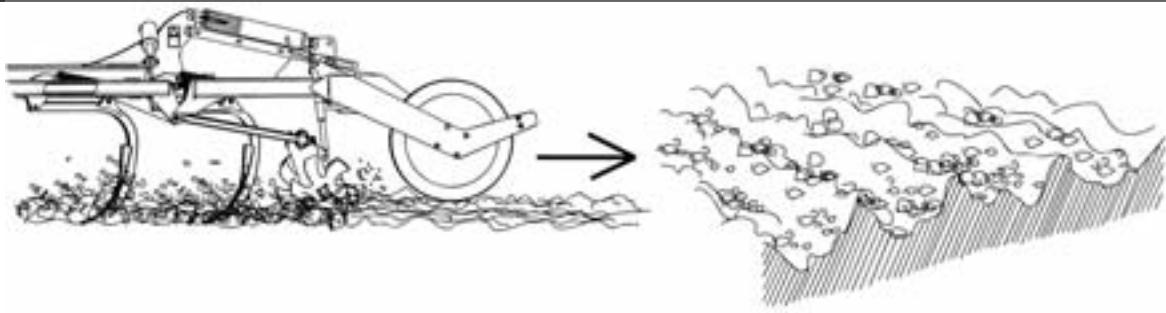

I





II




III

10

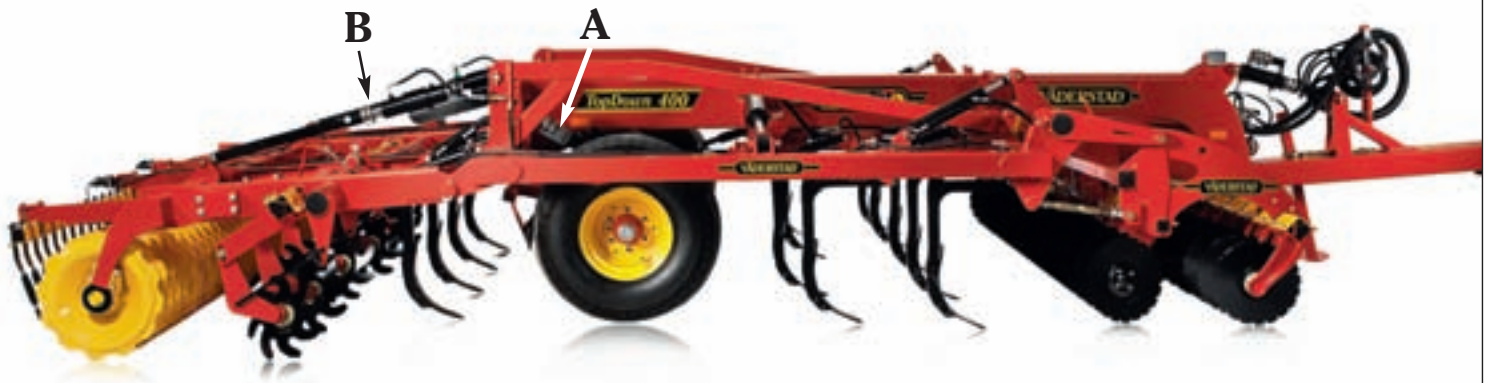

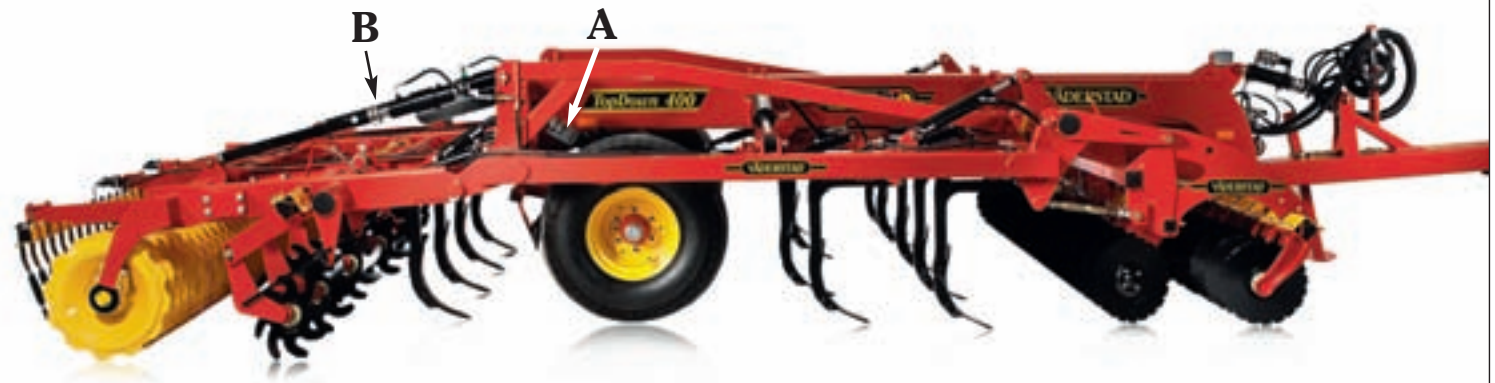

I


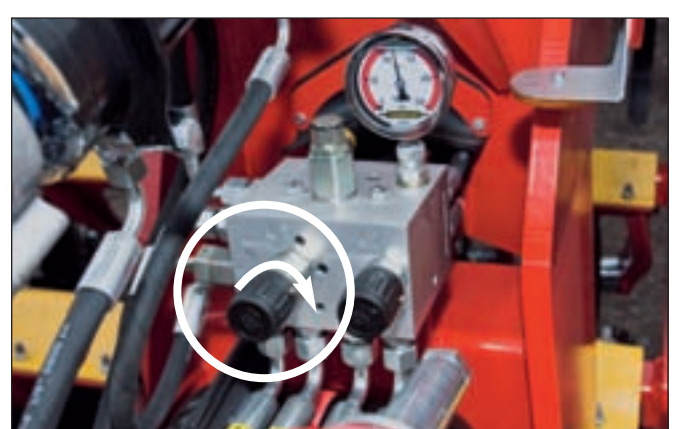



II



III

12

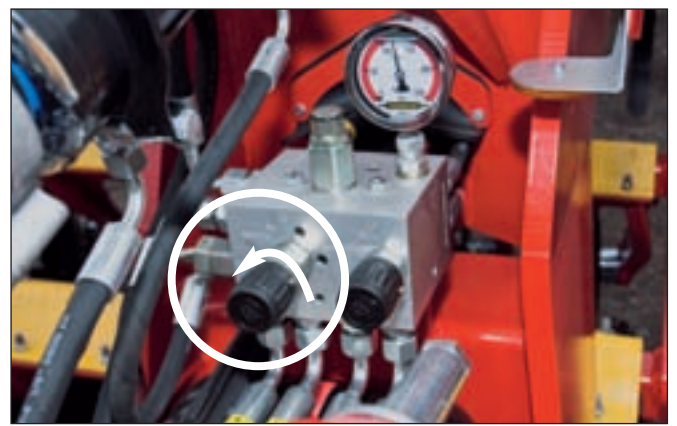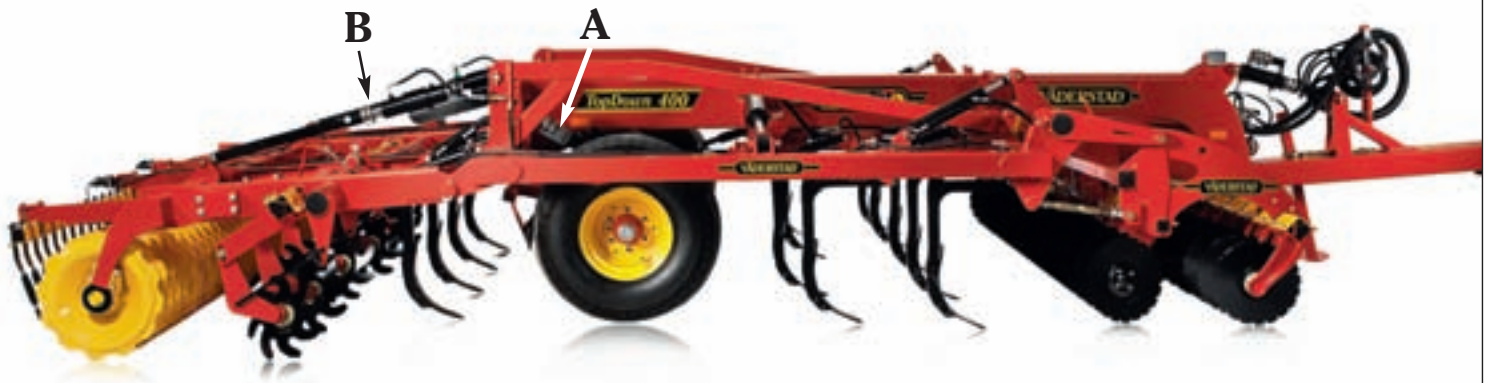

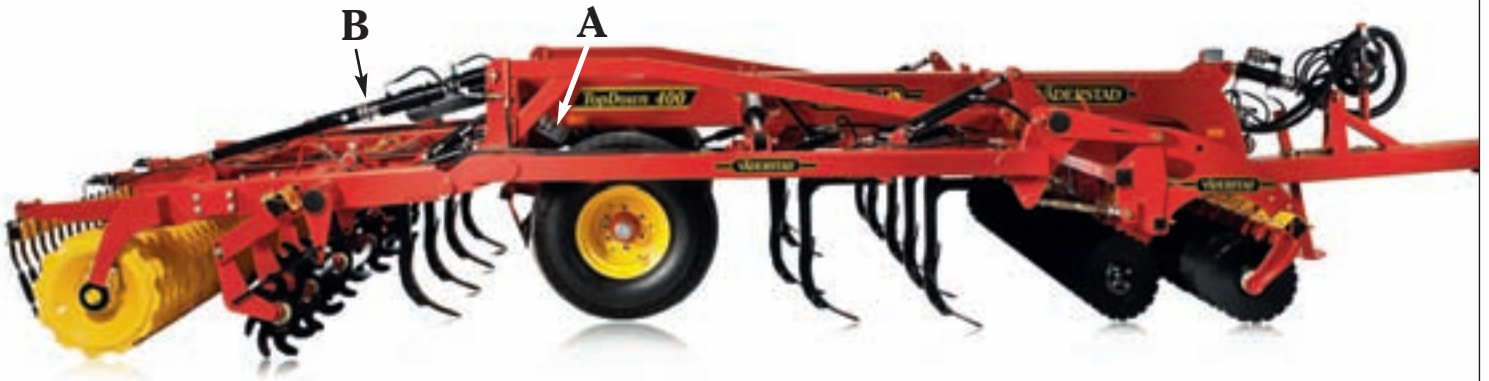

I



II



III

14




I





II



III

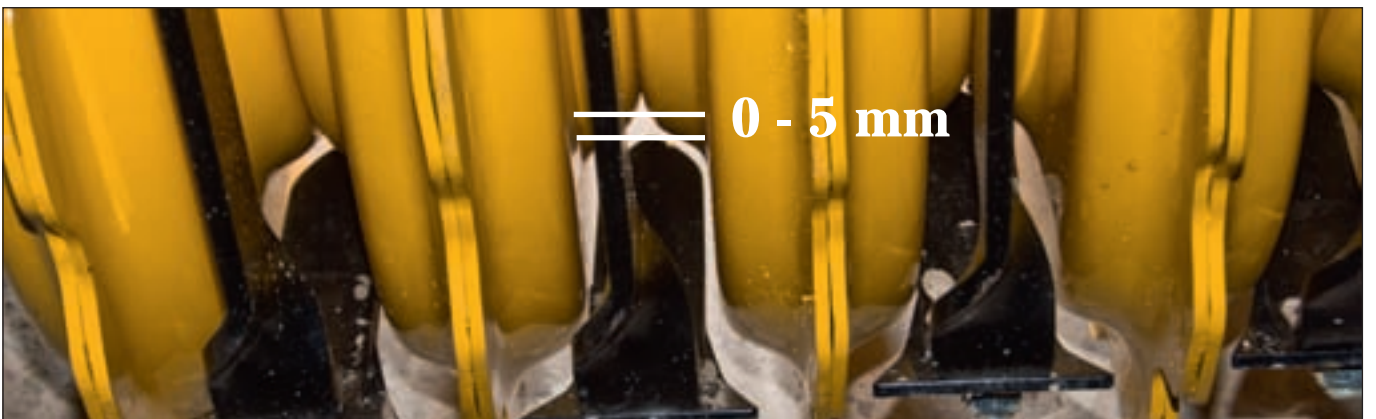

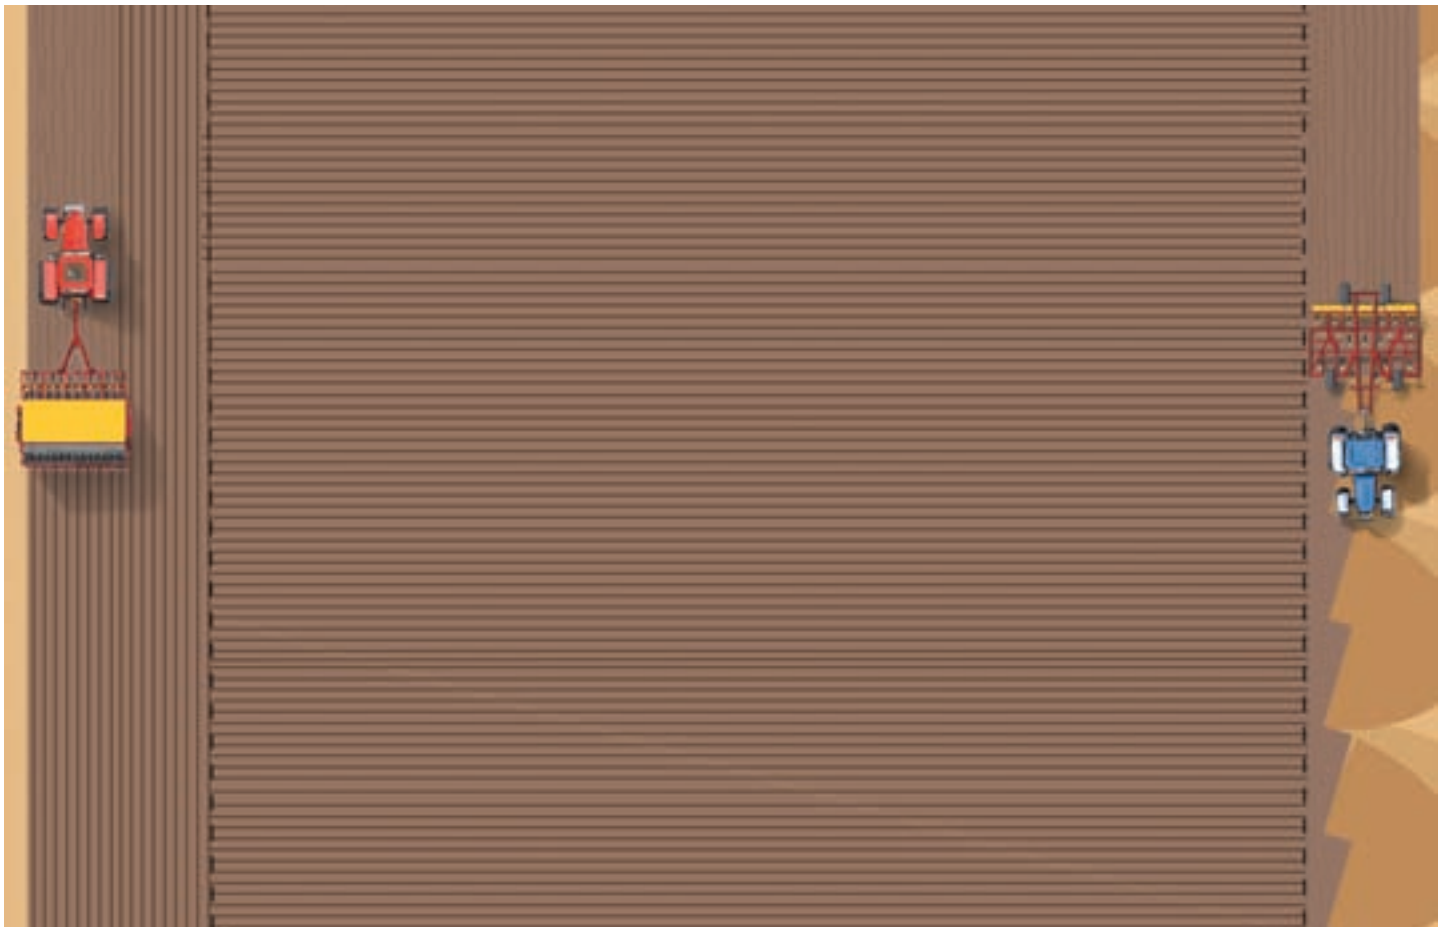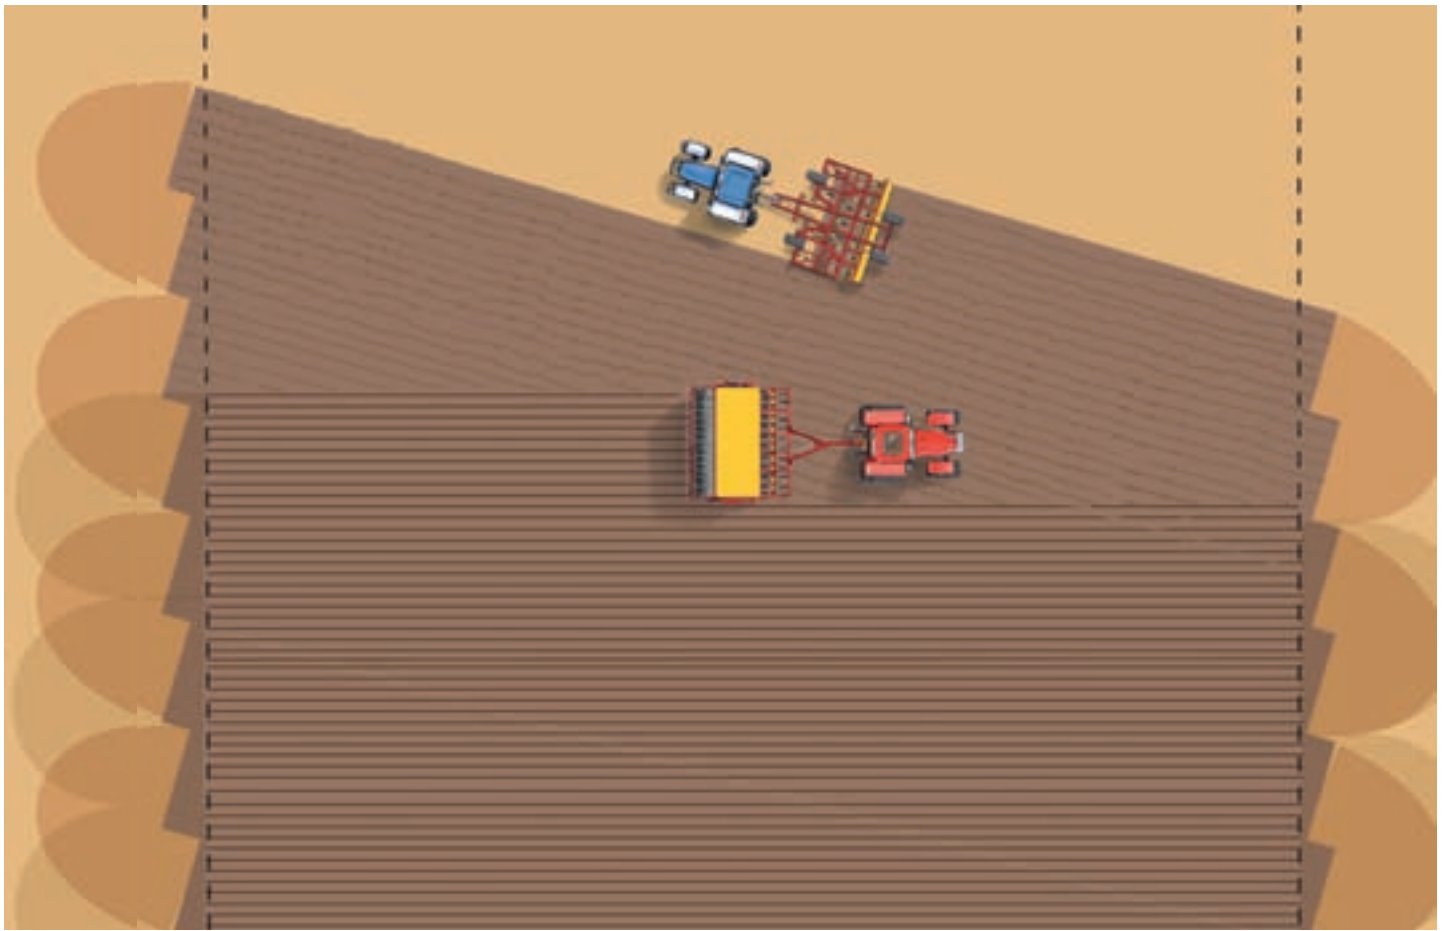

Väderstad AB
SE-590 21 VÄDERSTAD
Sweden
Phone: +46 142- 820 00

